


'L' Shaped Bath Panel Assembly Sheet

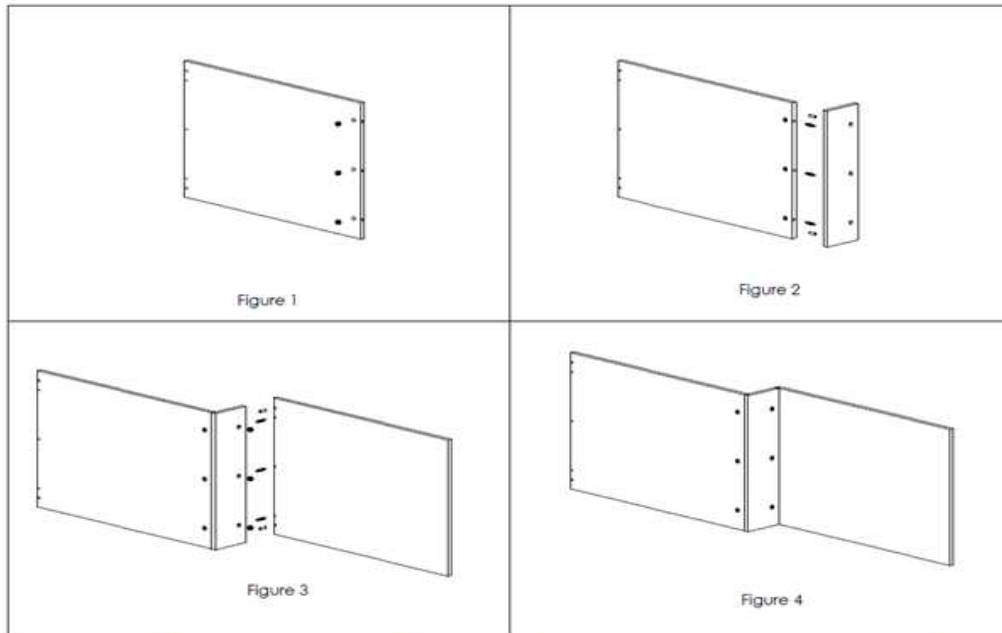

Please follow the instructions when assembling the attached Unit.

1. Insert the Steel cams provided into the panel as shown in Figure 1
2. Insert the steel dowels and timber dowels provided in the second panel and attach it to the panel as shown in Figure 1. When the panels are together, turn the cams and this will tighten the panels together.
3. Insert the steel dowels and timber dowels into the third panel provided. Insert the steel cams into the second panel. Attaché the third panel to the second panel as shown in Figure 3.
4. Tighten all steel cams in all panels and panels will be assembled as shown in Figure 4.

