



Additional Instructions for UK Installation

Schematic diagram of installation

Diagram shows 3 in 1 version.
For Mono and Duo versions the mixer connections do not apply.

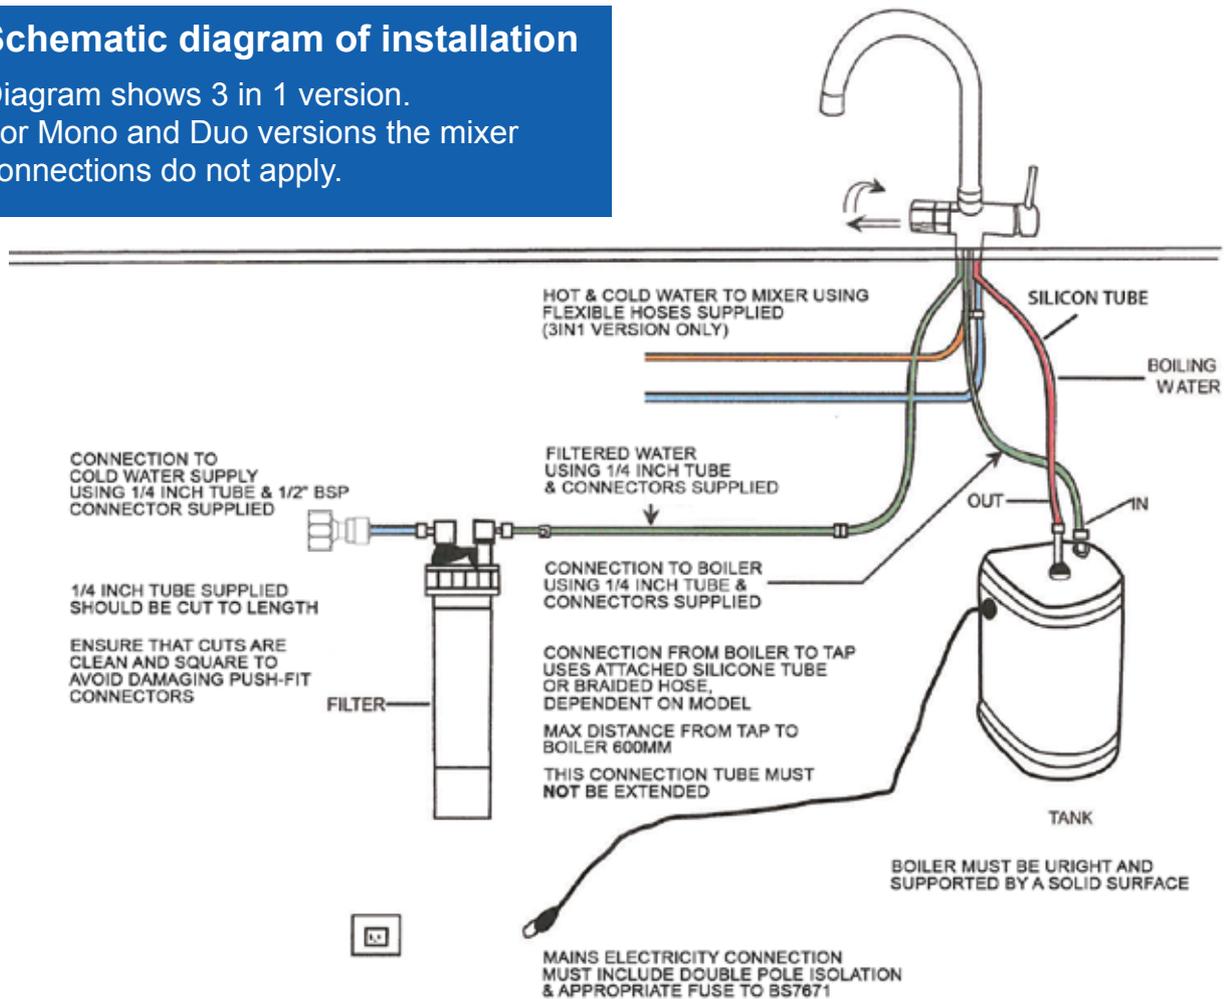

3 in 1 tap connections

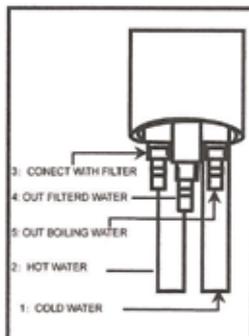

Isolation of supplies

The installer must ensure that effective isolator valves are installed close to the appliance to disconnect the water supplies for service and emergencies.

The electrical supply must also have an isolator compliant with electrical regulations.

The installer must ensure that the water and electricity to this appliance can be isolated independently of any other appliance.

1/4 inch to 1/2" adaptor

It is the responsibility of the installer to ensure a durable seal between the components provided and connections to the water supplies. See recommendations below.



1. Ensure 1/2" male thread is long enough to engage with rubber seal in supplied connector.

2. Longer thread more likely to seal correctly.

3. Isolation valves must be fitted.

4. The 1/2" connector should not be used directly on compression fittings. The seal will be easily damaged by the taper in the compression fitting.

5. Use appropriate flat-faced unions, fittings and adaptors.

Isolator valves and connectors to existing plumbing are not provided

Pressure requirements

The ReadyHot taps are designed for high pressure installations, and should not be used with gravity fed water supplies.

Minimum pressure: 1.0 bar.

Maximum pressure: 5.0 bar.

Temperature

The advertised boiling hot water temperature 98°C refers to the temperature of the water inside the tank. It is expected that the outlet temperature will always be lower than 98°C. Exact temperature of the dispense will be dependent on tap model and installation conditions.

Care should always be taken to avoid injury when using instant hot water appliances. Ensure that all users are familiar with the risks and safety devices.

Filter

The filter prevents limescale building up inside the boiler. The filter must be fitted and maintained to meet warranty conditions.

The filter must be changed every 6 months or sooner.

The filter will supply 600 litres of filtered water before it is depleted.

UK service

For technical enquiries, spare parts and warranty claims, contact our service provider, Flo-Aktiv on the number below, or email: readyhot@flo-aktiv.com.

FLO-AKTIV[®]
Diagnostics & Maintenance for Showers & Pumps

Technical helpline: 01937 534556